

Eton Elite Executive Table of Contents

Meet the Elite

Features	2
Product images	2-3

Button Functionality

Page/Time	4
F1-f7	4
On/Off	5
TZ/Line In	5
LM/MW/Band	5
Copy/Paste	5
Lock	5
Light/Edit	6
Erase	6
U/LSB / RDS Mode	6
SYNC / SSB / RDS	6
FM/Air Band	6
AM/Meter Band	6
WIDE/STEREO	6
NAR/MONO	6
AUTO	7
RESET	7

Setting your time zone

Time Zone Abbreviation List	7
-----------------------------------	---

Setting the click and weekday

Setting Alarms

Setting alarm 1 through 4	7
Activating and deactivating alarms	8

Using the Lock feature

Resetting the Radio

Adjusting the Brightness level of backlight

Activating the Sleep Timer

Display Current Sleep Timer setting

Tuning

Band Selection	10
Tuning in stations	11
Frequency Range	11
Frequency step list	12
Manual Tuning	12
Auto Tuning	12
Auto Tuning Storage (ATS)	12
Rotate Tuning	13
Direct Key Tuning	13

Storing Stations into memory

Access Stored Memories	14
Copy/Paste Memory Page	14
Copying and pasting one memory location to another	14
Copying and pasting an entire memory page	14
Labeling Memory Page	15
Deleting a selected memory location	15
9K/10K AM(MW) step selection / FM Frequency range.....	16
FM Stereo/Mono Selection	16
AM/VHF Aircraft Bandwidth Selection	16
Squelch Selection.....	17
FM/RDS.....	17
Weekday display format	17
Tuning SSB (Single Sideband)	18
Using the synchronous detector.....	18
Using the DX/Local switch	19
Charging NI-MH Battery in the Elite Executive.....	19
Line-In/Out Socket	20
Headphone Jack	20
Volume Control.....	20
External Antenna Socket	20
Need Help? Contact US	20
Warning	21
Environment	
Disposal	21
Warranty Registration	21
Limited Warranty	21
Service for your product.....	22
Warranty	22
Non-Warranty	22