

 
DIGITAL



SUNFLASH

RD-666


**AM/FM/SW 3 BAND RADIO
MP3 MUSIC PLAYER & WIRELESS LINK**



MADE IN CHINA

Function Keys Illustration

1. Telescopic antenna
2. USB jack
3. TF card slot
4. BAND switch
5. MP3 monitor
6. MP3 PLAY/PAUSE button
7. MP3 PREV button
8. MP3 NEXT button
9. REPEAT playback
10. EQ button
11. MODE button
12. AUX jack
13. DC 5V IN socket
14. CHARGE LED
15. TUNING knob
16. VOLUME control
17. Battery compartment
18. Torch
19. Torch (on/off)
20. AC socket

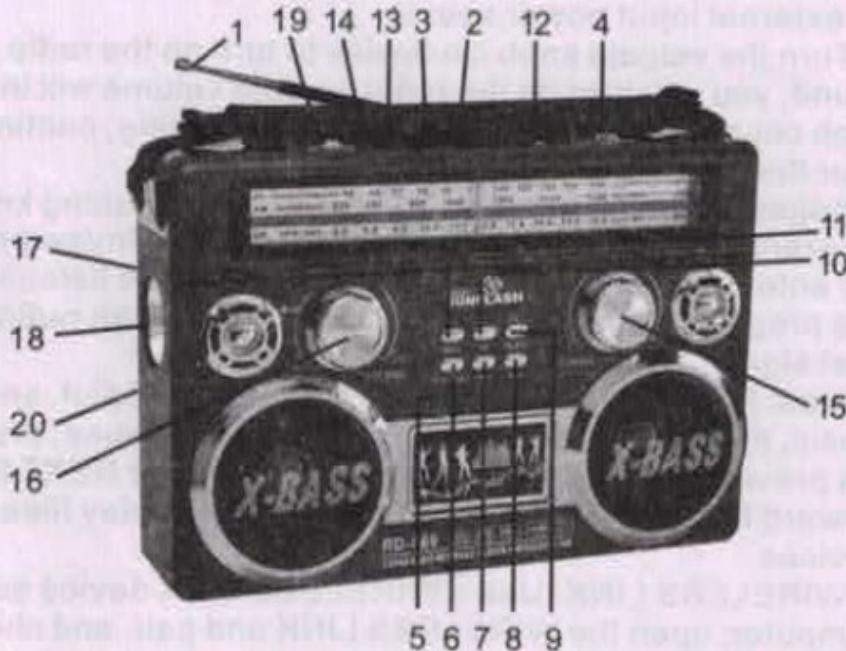

Operations Specifications

1. Insert the battery into the battery compartment in the correct direction or use an external input power source.
2. Turn the volume knob clockwise to turn on the radio. When you hear the "DI" sound, you can turn on the radio and the volume will increase. Turn the volume knob counterclockwise to decrease the volume, continue turning, when you hear the "DI" sound, you can turn off the radio.
3. Adjust the band selector, and then turn the tuning knob to receive different programs from AM/FM/SW. When listening to fm/sw programs, please pull out the antenna and change the length to make the listening clear. When listening to a program from AM, change the position of the radio until you receive the best signal.
4. Mp3: Insert the USB/card into the USB/card slot, select USB/card to play music, press PLAY/PAUSE to select play or pause, press PREV or NEXT to get the previous or next track, long press PREV or NEXT to fast Rewind/fast forward function. Press MODE to switch and play files recorded by various devices.
5. WIRELESS LINK: Use a WIRELESS LINK device such as a mobile phone or computer, open the WIRELESS LINK and pair, and choose to play media songs.
6. Built-in rechargeable battery. When the machine's sound is low or does not work, it indicates that the battery is undervoltage or out of power. Plug in an external charger and charge it. The battery can be fully charged in 3-4 hours.

Precautions

- *Please take out batteries if not using the unit in a long time.
- *Please don't hit or drop strongly, don't stay it in the condition of damp, corrosive, high temperature and under strong light.
- *To clean surface of it, please use soft cloth light with a mild detergent solution. Do not use any strong solvents such as alcohol, benzine or corrosive.

Power source: AC : 110V-230V/60Hz-50Hz

DC : 6V IN

DC : 6V(UM-1X4PCS)

Frequency range

AM:530-1600KHz FM:88-108MHz SW:8-16MHz

(RD-666)