Installation/Instructions for Use

English

Instructions for use

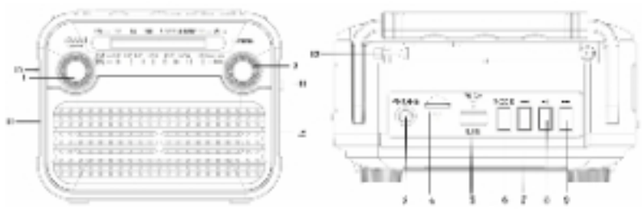

Product Model: RX-125BT / RX-128BT

1.POWER/VOLUME ON/OFF
2.TUNING KNOB
3.EARPHONE JACK
4.TF SLOT
5.USB SLOT
6.MODE BUTTON
7.USB PREV BOTTON
8.USB PLAY / PAUSE BUTTON
9.USB NEXT BUTTON
10.TORCH LIGHT ON/OFF
11.FUNCTION SWITCH
12.CHARGING SLOT
13.TIE ROD ANTENNA
14.LED LIGHT

SPECIFICATION

1.FM/AM/SW 3-band radio
2.USB/TF MP3/BT player
3.LED light
4.High sensitivity antenna
5.Built-in speaker
6.Built-in rechargeable battery
(18650: 3.7V/800MA)-3V(UM-1*2)
7.DC: 5V

Operating Frequency Band: 30-1GHz
Maximum Radio-Frequency Power: 3.79dBm

Functional operation

1. Turn the volume button (1) to turn it on, and then select the desired volume.
2. Frequency selection: push function switch (11) select mode (MP3, FM, AM, SW)
3. Turn the FM button (2) to select the desired channel and adjust the antenna position (13) for the best reception effect.
4. The function switch (11) is pushed to MP3 mode, which can be linked to BT playback or plugged into USB or TF card to play.
5. To turn off the radio, turn off the volume button (1).

Battery operation:

Note: You need to remove the insulation sheet before use, and you need to charge it for 4 hours for the first use.

1. The device has a built-in rechargeable battery. When charging, the indicator light will turn red.
2. When using (3V(UM-1*2), make sure that the battery is installed correctly in the specified order and maintain the correct polarity of the positive and negative poles. This is done to prevent damage to the equipment.

Safety warning words

1. Avoid getting wet or not being able to get close to water sources
2. Do not use this device in a humid environment to avoid electric shock or damage to the equipment
3. Please do not disassembling or modify this equipment without authorization.
4. Do not use this equipment in high temperature, flammable or explosive environments
5. Please do not hit, fall and squeeze violently
6. Do not place it next to open fire or high-temperature heat sources
7. Do not use non-specific power supplies / batteries

Battery safety warning

1. Please install the battery according to the correct polarity.
2. Do not mix old and new batteries or different types of batteries.
3. Do not throw the battery into fire, disassemble or short-circuit.
4. Please keep the battery out of the reach of children.
5. If the battery leaks or is damaged, please do not touch it and deal with it safely in accordance with local regulations in time.

ACCESSORIES: USB charging cable

Safety Information Statement

Safety warning words

1. Avoid getting wet or not being able to get close to water sources

2. Do not use this device in a humid environment to avoid electric shock or damage to the equipment

3. Please do not disassembling or modify this equipment without authorization.

4. Do not use this equipment in high temperature, flammable or explosive environments

5. Please do not hit, fall and squeeze violently

6. Do not place it next to open fire or high-temperature heat sources

7. Do not use non-specific power supplies / batteries

Battery safety warning

1. Please install the battery according to the correct polarity.

2. Do not mix old and new batteries or different types of batteries.

3. Do not throw the battery into fire, disassemble or short-circuit.

4. Please keep the battery out of the reach of children.

5. If the battery leaks or is damaged, please do not touch it and deal with it safely in accordance with local regulations in time.

English

Instructions for use

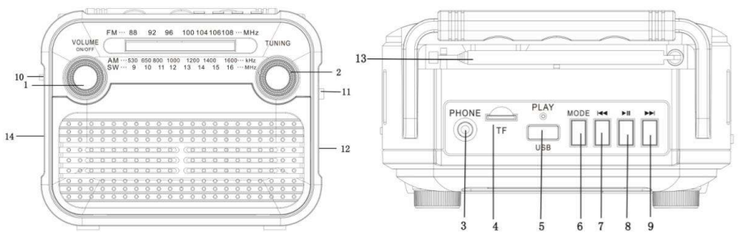

Product Model: RX-125BT / RX-128BT

1.POWER/VOLUME ON/OFF
2.TUNING KNOB
3.EARPHONE JACK
4.TF SLOT
5.USB SLOT
6.MODE BUTTON
7.USB PREV BOTTON
8.USB PLAY / PAUSE BUTTON
9.USB NEXT BUTTON
10.TORCH LIGHT ON/OFF
11.FUNCTION SWITCH
12.CHARGING SLOT
13.TIE ROD ANTENNA
14.LED LIGHT

SPECIFICATION

1.FM/AM/SW 3-band radio
2.USB/TF MP3/BT player
3.LED light
4.High sensitivity antenna
5.Built-in speaker
6.Built-in rechargeable battery
(18650: 3.7V/800MA)-3V(UM-1*2)
7.DC: 5V

Operating Frequency Band: 30-1GHz
Maximum Radio-Frequency Power: 3.79dBm

Functional operation

1. Turn the volume button (1) to turn it on, and then select the desired volume.
2. Frequency selection: push function switch (11) select mode (MP3, FM, AM, SW)
3. Turn the FM button (2) to select the desired channel and adjust the antenna position (13) for the best reception effect.
4. The function switch (11) is pushed to MP3 mode, which can be linked to BT playback or plugged into USB or TF card to play.
5. To turn off the radio, turn off the volume button (1).

Battery operation:

Note: You need to remove the insulation sheet before use, and you need to charge it for 4 hours for the first use.
1. The device has a built-in rechargeable battery. When charging, the indicator light will turn red.
2. When using (3V(UM-1*2), make sure that the battery is installed correctly in the specified order and maintain the correct polarity of the positive and negative poles. This is done to prevent damage to the equipment.

Safety warning words

1. Avoid getting wet or not being able to get close to water sources
2. Do not use this device in a humid environment to avoid electric shock or damage to the equipment
3. Please do not disassembling or modify this equipment without authorization.
4. Do not use this equipment in high temperature, flammable or explosive environments
5. Please do not hit, fall and squeeze violently
6. Do not place it next to open fire or high-temperature heat sources
7. Do not use non-specific power supplies / batteries

Battery safety warning

1. Please install the battery according to the correct polarity.
2. Do not mix old and new batteries or different types of batteries.
3. Do not throw the battery into fire, disassemble or short-circuit.
4. Please keep the battery out of the reach of children.
5. If the battery leaks or is damaged, please do not touch it and deal with it safely in accordance with local regulations in time.

ACCESSORIES: USB charging cable